

IMPRESSA Xs9 Classic

Descaling the machine

Approximate duration 45 min.

Equipment required:
Descaling tablets
 Tub of 36 (Art. 70751)
 Pack of 3 (Art. 61848)



These short instructions do not replace the 'IMPRESSA Xs9 Classic Instructions for Use'. Make sure you read and observe the safety information and warnings first in order to avoid hazards.



**Precondition: COFFEE READY /
 DECALCIFY MACHINE**




**DURATION 45 MIN. /
 START YES**




EMPTY TRAY

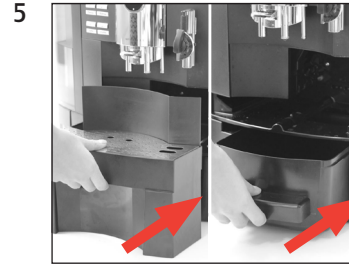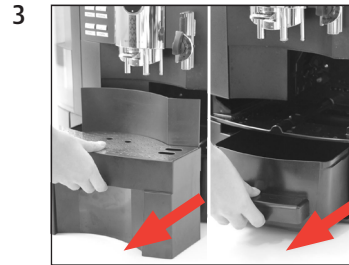



SOLVENT IN TANK

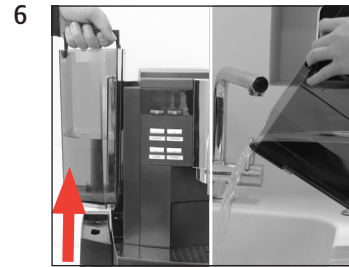



**SOLVENT IN TANK /
 PRESS RINSE**

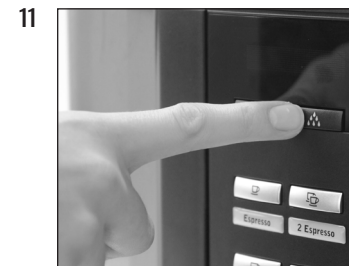


**DECALCOS
 EMPTY TRAY**

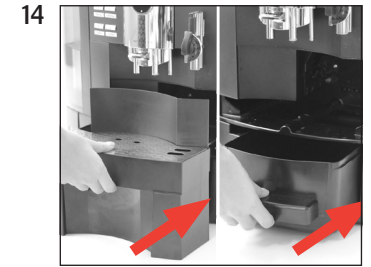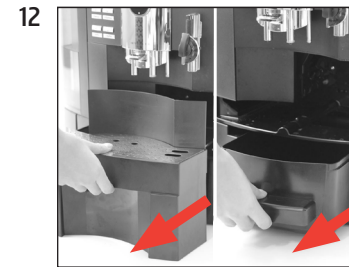




**RINSE WATER TANK /
 FILL WATER TANK**

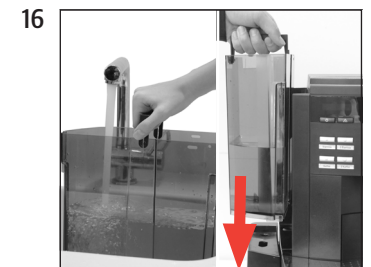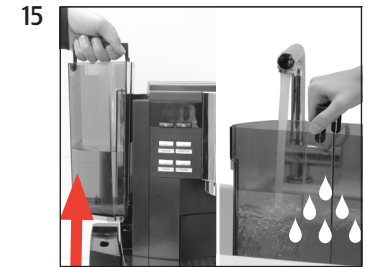

PRESS RINSE

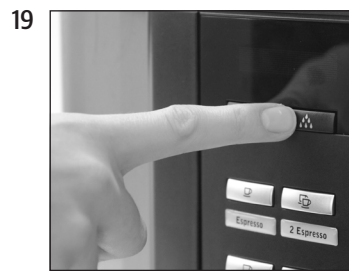

DECALOS
HEATING UP
MACHINE RINSING
EMPTY TRAY

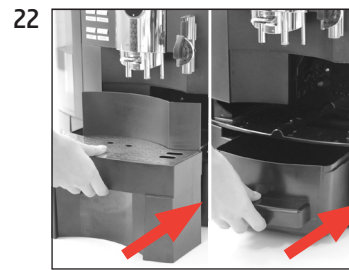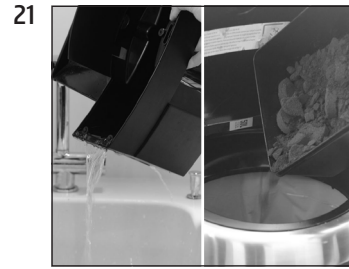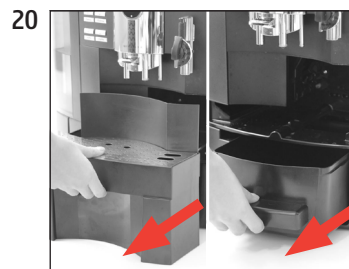

COFFEE READY